



High Temperature High Bay

Installation & Operation

- STEP 1: Fasten the fixture hanger to the 2PCS FLI-150S-V01 (V04) luminaire with 2pcs M12×30 hexagon socket head bolt and 2pcs M5×12 screws.
- STEP 2: Secure the junction box hanger to the bottom of the junction box with 2pcs M8×30 hexagon socket head bolt and 2pcs "spring pad". And secure the junction box to the NPT3/4 lever and tighten with 1pcs M4×10 screws.

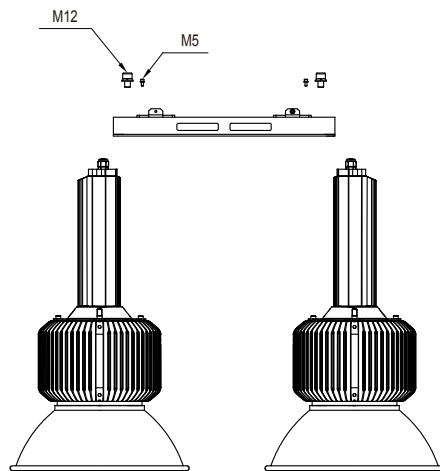


STEP 1

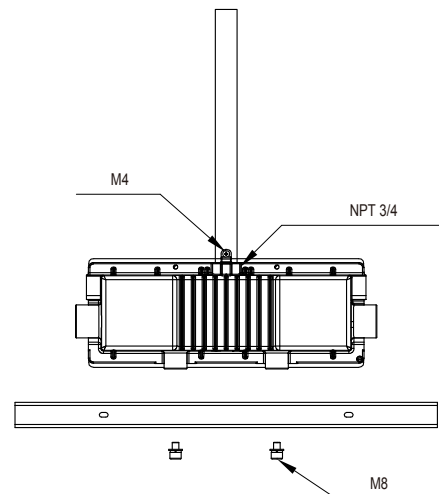


STEP 2

- STEP 3: Insert the luminaire assembly that has been fastened in step 1 into the guide groove of the luminaire hanger as shown in the figure below.
- STEP 4: Use 4PCS M5×20 bolt to tighten the hanger through the side holes. The cable is butted, the 3-core cable is connected to the 3-core cable, and the 2-core cable is connected to the 2-core cable.

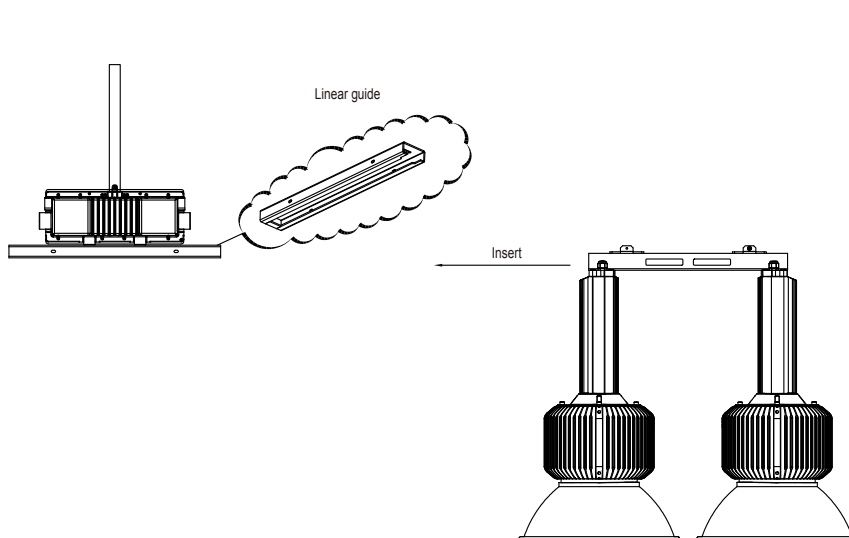

STEP 3

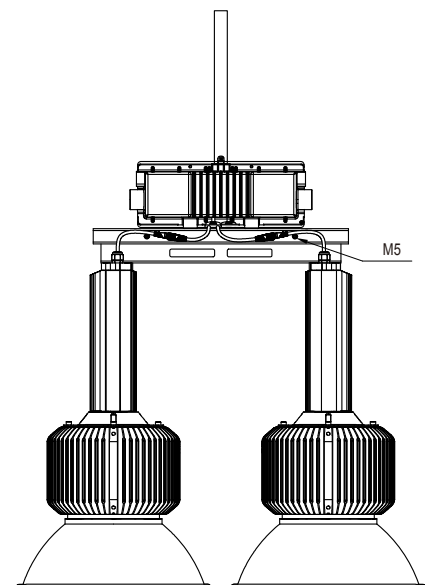

STEP 4